


7/8" diameter, 1/2" thick plywood insert
- install before glassing

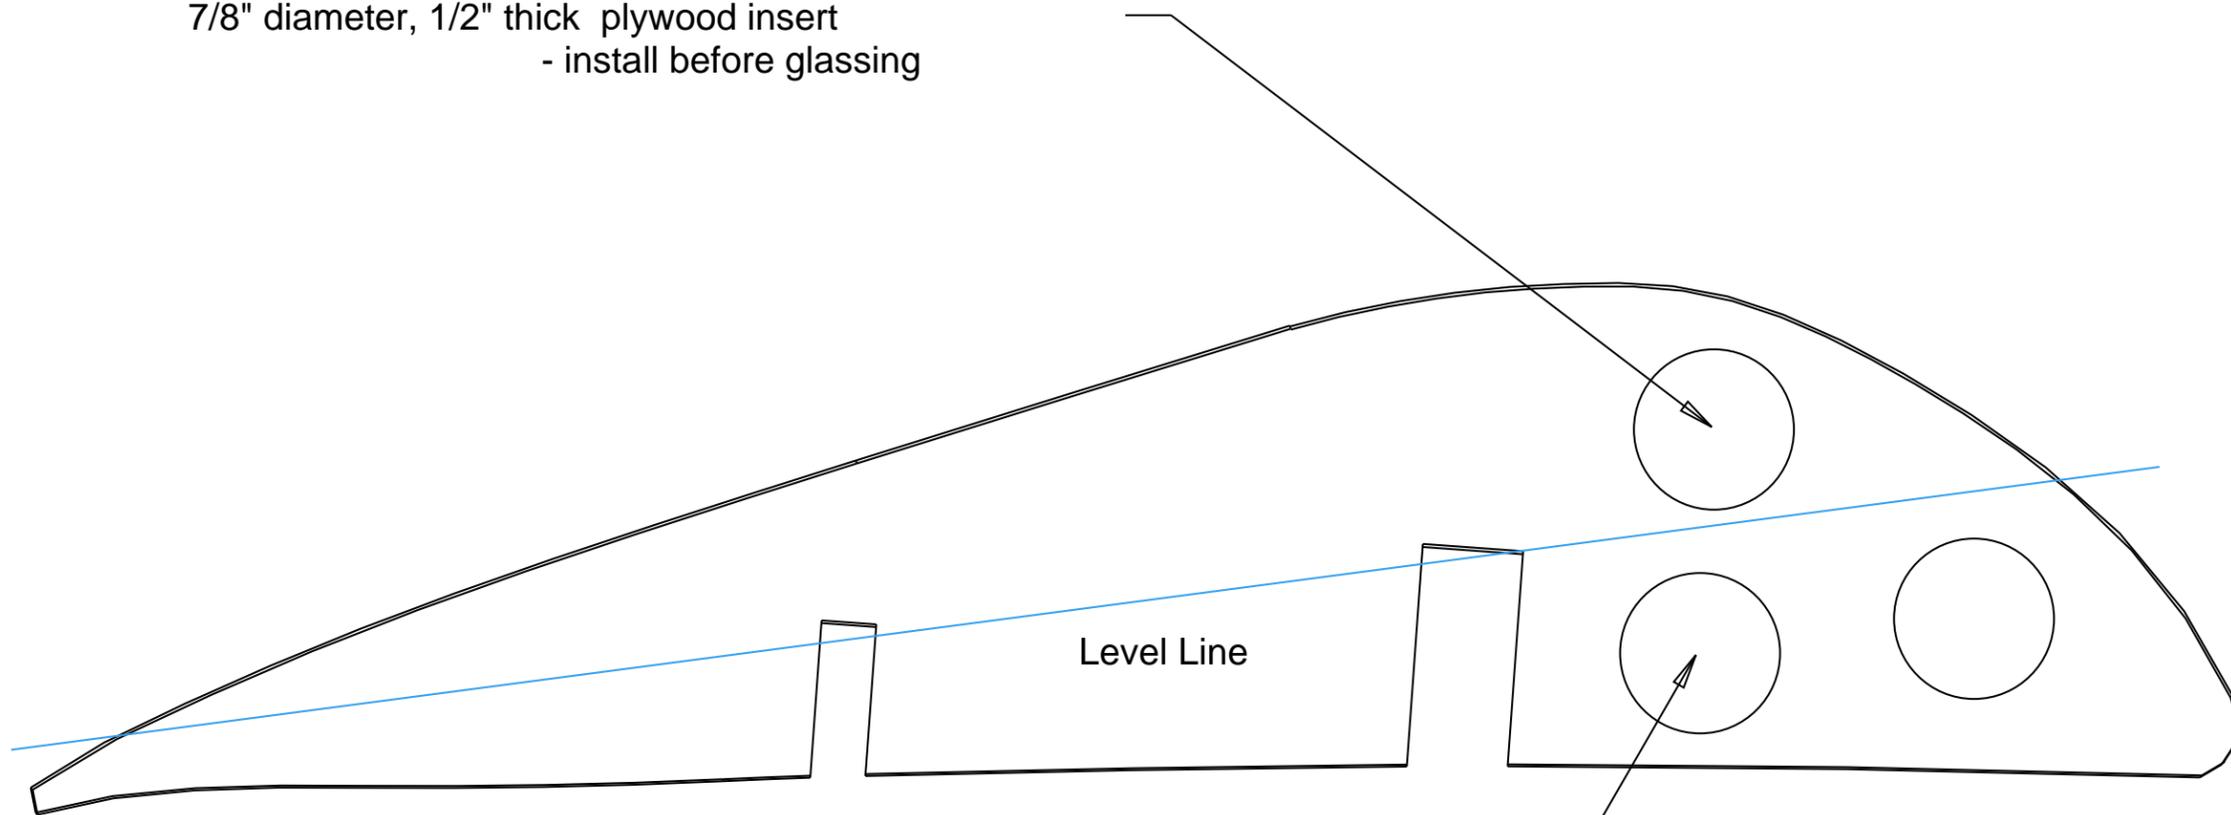

Level Line

Do not drill .188" holes until proper
position of the flap rib has been
determined with respect to the wing airfoil

SCALE 1.000

Fabricate from 1/2" Last-a-foam with 2 layers BID on each side.

	Flaps Rib D		
Jan. 7th 2012			